Full Flat

The comfort of full-flat expands









Comfortable

The comfort of elegance by inheriting the Yume concept

The Yume concept of relaxation quality is also emphasized in Yume Espoir. Full-flat seats, neck devices, and sitting styles have inherited the comfortable functionality and technology cultivated with Yume.

- Full-flat seats that let customers relax
- Neck devices maintain comfort even during lengthy treatments
- Sitting styles let staff provide treatments in comfort



Stylish Form

Stylish form with a sense of unity

The light, functional separate structure is ideal for providing a comfortable treatment environment. Presenting a sense of unity that connects the chair and basin, the form is outstanding. With modern sophistication, the simple design blends in with the interior décor of any salon.

Customize Variations selected according to shampooing style



for Backwash Shampoo

Basin shape designed specifically for back approaches

Height of the rear edge of the basin is made low so that the stylist's elbows will not hit the basin during services. Wide basin and low edges are perfect for approaching from the back.


Quiet water drainage employing ventilating valves

The drainage pipe in the basin is equipped with ventilating valves, which reduces the unpleasant noise when water drains from the basin.

Easy-to-use faucet fittings layout

The shower head is located at the center back of the basin, while the water tap and temperature centrol knob are located with bilatoral symmetry incide the basin. With adjustable fine temperature settings during head spa services, this layout is unique to Yume. "Water valve layout may differ depending on the region.







Height of the rear edge of the basin is made low so that the stylist's elbows will not hit the basin during services.

NECH

Comfortable neck device for head spa specifications



Two head cushions and one neck cushion supports the head in three different areas creating the perfect balance for long period of treatments.

[SIDE VIEW OF THE NECK SUPPORT]





2-axis design adjusts to the contours of the head and helps every customer maintain ultimate comfort.

NECK HEIGHT

Neck height of the basin is fixed at 800 mm (31.5 inches), which is a suitable height for stylists to give services in a seating posture.

SHOWER HEAD

Selectable showerheads



Adjustable shower head Standard shower head

Choose from the adjustable shower head and standard shower head.

Adjustable shower head



With sufficient water flow volume and water pressure, this shower head can switch between shower and low-splash foaming mode depending on the treatment

Rotation plug that rotates to open / close





The basin is equipped with a new mechanism that fills or drains the basin simply by rotating the plug.

*At the end of the workday or when the chair is not being used for a lengthy period, please remove the drainage plug from the basin.

Quality A comfortable chair embodying hospitality for customers

With a design that gives careful consideration to customer needs and comfort, as well as mechanisms that could only be created by Takara Belmont, the basin, comfort, and functionality of the chair demonstrate the true value of this product.

FEATURES

[For Premium Line only]

Wide seats encompassing the body

In order for customers with varying body shapes to relax comfortably in the chair, the design provides an extra 25 mm (1 inch) of seat width on each side. Wider seats combined with softer, highly comfortable cushion materials and fine stitching realize a level of comfort that envelops the customer.



[For Both Premium Line and Basic Line]

EASY SETTING

Synchronized movement of the chair up / down and the backrest reclining allows smooth setting to the shampooing position.



LOW INITIAL HEIGHT

Low initial height allows easy approach for any customers no matter their height.



DN UP

FOOT CONTROL

Preset, auto return, and manual controls can be done by a foot control. This feature means that even if your hands are busy at the basin you can change any aspect of the chair without disturbing your customer.



The heaters installed in the leg rest raise the added value by providing customers with greater comfort and warmth during treatments.



* This function is not available for some regions.



For treatment between the basin and chair

295 mm (11.6 inches) space is created between the basin and the chair when the backrest is in the upright position, allowing stylists to stand in between the basin and the chair for giving services such as shoulder massages and product application

Coordinate Coordinating the salon's concept / image

Various combinations of chair type, leather color, and cover allow salons to coordinate the device to match their own unique concept or image.

SEAT LINE

Premium Line









Basic Line











In designing these products, we were especially particular in creating wide seats, high cushioning, fine stitching, and supple leather. We paid careful attention to the finest detail in order to realize a high-quality level of comfort when sitting in the chair. These products are recommended for salons that want to provide total beauty services.

Fixed Leg Rest Version



Adjustable Leg Rest Version

Leg rest moves in conjunction with the backrest. Leg rest folds down, allowing easy approach for the customers and space-saving for the salons.





The slim, stylish design has a simple finish. The slightly firm seat fits comfortably to the body and provides comfort even for long periods of time. These products are recommended for salons preferring a stylish design.

Fixed Leg Rest Version



Adjustable Leg Rest Version



COVER COLOR

BLACK







Option

STOOL

ESPOIR Stool

EX-ESST

Size: W360×D390×H474~680mm (W14.17×D15.35×H18.66~26.77 inches)

The simple specifications integrate the functions necessary for shampooing in a sitting position and lighten the stool. The seat swings forward while the customer is seated. This product also lets the salon provide head spas and other treatments in comfort.







Lifting stroke : 206mm (8.11 inches)

Maximum swing angle: approximately 8 degrees in the forward direction from the vertical position.

WAGON

YUME Wagon

- WHITE SR-ES WH
- wood SR-ES WD





WOOD

MIST

SPA MIST 2

AK-160SBR/AY-160S



OTHERS

YUME Shampoo Cape EA-YMCP



With 'YUME' logo

■ Optional Accessaries

Leg Rest Cover



(* The above picture is for Premium Line.)

- · For Premium Line EA-ESPVCL · For Basic Line
- Yume Head Cushions EA-ESBVCL
 - for Backwash Basin EA-YMH2

 Yume Neck Cushion for Backwash Basin

EA-YMN

COMBINATION LIST

| BASIN | CHAIR | BODY COVER COLOR |
|----------------|--|----------------------|
| Backwash Basin | Basic Line Fixed Leg Rest Version | Black Luxe Silver |
| | Basic Line Adjustable Leg Rest Version | |
| | Premium Line Fixed Leg Rest Version | |
| | Premium Line Adjustable Leg Rest Version | |


Specifications

DIMENSIONS


[Overall layout disgram] (Unit : inch [m])

Unit: Backwash Type Chair: Fixed Leg Rest Seat: Basic

■ Top view

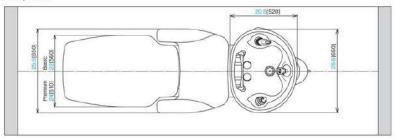


Side view

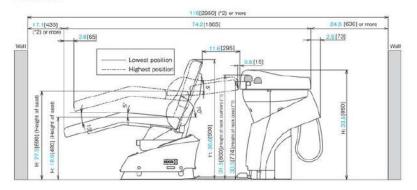


Unit: Backwash type Chair: Adjustable Leg Rest Seat: Basic

■Top view

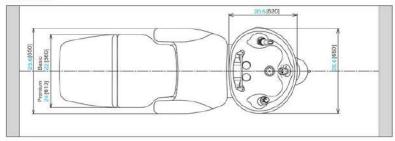

Side view

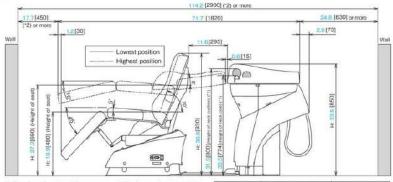


- *1 The dimensions listed above may vary slightly from product to product.
- '2 Ensure that there is ample space surrounding the seat for extremely tall customers or if the surrounding area is used as a passageway.

| | Height of neck cushion | Height of neck core |
|------------------------------|------------------------|---------------------|
| Backwash Type (AY-EXESYM) | 31.5 [800] | 305 [774] |

Specifications

DIMENSIONS

[FOOTPRINT]

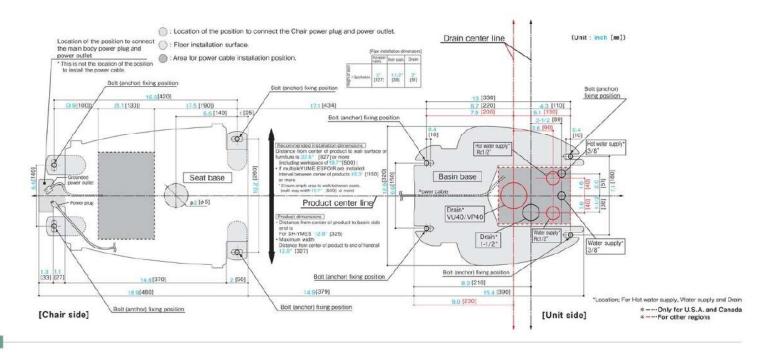

SPECIFICATIONS

| Dimensions | Backwash Basin and Chair with Fixed Leg Rest; Backwash Basin and Chair with Adjustable Leg Rest; | W650 x D1958 x H930 mm (W25.6 x D77.1 x H36.6 inches) W650 x D1893 x H930 mm (W25.6 x D74.6 x H36.6 inches) |
|--------------------|---|--|
| Weight (Unit Only) | Backwash Basin and Chair with Fixed Leg Rest; Backwash Basin and Chair with Adjustable Leg Rest; | 96.5KGS (212.7LBS) 97KGS (213.8LBS) |
| Power Consumption | AC110V: 50/60HZ, 4.3/2.8A AC12UV: 50/60HZ, 5.//3.4A AC22UV: 50/60HZ, 1./71.6A AC230V: 50/60HZ, 1.9/1.6A AC230V: 50/60HZ, 2.1/1.7A | |

"When purchasing one of the products, please read the enclosed instruction manual carefully before use to ensure proper operation.

^{*}The product requires specialized installation. Please consult the store where you purchased the product. Incorrect installation of the product can result in accidents. Please be sure to install the production in strict accordance with the installation manual.

Salon construction example



















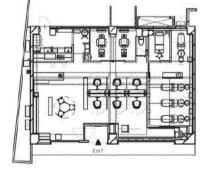

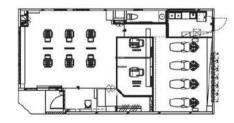



Espoir gallery
















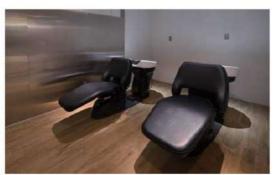



ESPOIR 14

TAKARA BELMONT GROUP

JAPAN TAKARA BELMONT CORPORATION, OSAKA HEADQUARTERS

Tel: +81-6-6212-3523 E-mail: beauty@takara-net.com Web: www.takarabelmont.co.jp/global/

U.S.A. TAKARA BELMONT USA, INC.

Tel: +1-732-469-5000 E-mail: webmaster@takarabelmont.com Web: www.takarabelmont.com

CANADA TAKARA COMPANY, CANADA, LTD.

Tel; +1-905-822-2755 Toll-free: +1-800-268-5351 Web: www.takarabelmont.ca

BRAZIL TAKARA BELMONT PARA AMERICA DO SUL INDUSTRIA E COMERCIO DE MOVEIS LTDA.

Tel; +55-11-3147-4040 E-mail; takbel@takarabelmont.com.br Web: www.takarabelmont.com.br

U.K. TAKARA BELMONT (UK) LTD.

Tel: +44-20-7515-0333 E-mail: hairdressing@takara.co.uk Web: www.takara.co.uk

GERMANY TAKARA BELMONT FRANKFURT OFFICE

Tel: +49-69-2972-8090 E-mail: info@takara-belmont.de Web: www.takara.co.uk

KOREA TAKARA BELMONT (KOREA) CORPORATION

Tel: +82-2-413-5977 E-mail: info@takarabelmont.co.kr Web: www.takarabelmont.co.kr

TAIWAN TAKARA BELMONT (TAIWAN) CORPORATION

Tel: +886-2-8789-0809 E-mail: takara.twn@msa.hinet.net Web: www.takara-tw.com

CHINA TAKARA BELMONT (SHANGHAI) CORPORATION

Tel: +86-21-6272-8166 E-mail: takara-china@takarabelmont.com.cn Web: www.takarabelmont.com.cn

SINGAPORE TAKARA BELMONT SINGAPORE PTE. LTD.

Tel: +65-6316-1110 E-mail: hairdressing@takarabelmont.sg Web: www.takarabelmont.sg

